

Double Flow Counter SE530B



The double flow counter SE530B is used for counting and displaying the flow through 1 or 2 manually operated draught beer- or water taps. Each counter individually measuring liquid quantity from 0,1 to 9999 litres. The SE530B does not use valves for controlling the beer flow. A built-in rechargeable battery ensures correct operation even with the mains power turned off.

Display

The two 4-digit displays show the consumption on the two taps in decilitres or litres (or pints, gallons etc.). Also registries errors will be indicated.

Keys

The SE530B is operated by means of 2 keys, a Reset key and a Service key. The Reset key is used by the restaurant manager for resetting the counters and/or viewing error messages. The SE530B detects errors in: The flowtransmitters, the mains power supply, the built-in rechargeable battery and the internal memory. The Service key is used by the maintenance personnel for cleaning the beer installation. The consumption during cleaning is accumulated in two extra counters, thereby protecting the two main counters.

Filters

Digital-filters in SE530B flow counter will, when used together with the SE525C – flowtransmitter, filter out foam, carbonic acid and small liquid movements caused by variations in temperature and pressure. In this way only the flow of real fluid will be count.

Backup battery

The built-in rechargeable battery ensures correct operation of the system for a power-down period of at least 4 hours. A built-in intelligent charging circuit maintain automatically the rechargeable battery, when power is on.

Dimensions/Weight

Box: 110 x 68 x 45mm (length x width x height). Weight incl. hanger: 350 g.

Mounting

The SE530B can be mounted under desk by means of the enclosed metal hanger SE505A. For mounting on wall there exists an option wall hanger SE507A.

Power supply


The SE530B is powered by the enclosed 230V~ mains AC adaptor SE514A. The adaptor does not require grounding.

Manuals

The SE530B comes with user manual plus an installation guide.



One display for each tap

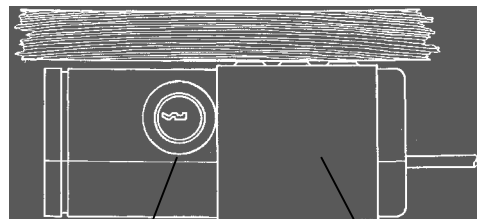


Key receptacle

Hanger SE505A

Accessories:



Flowtransmitter SE525C14M5

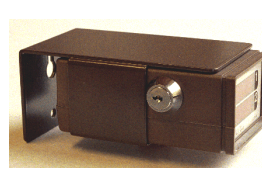

Wall hanger SE507A
(Shown with counter)